

Setup Sheet for Program 1001

JOB DESCRIPTION: Top/Bottom M3 Tap
DOCUMENT PATH: Wall Rod v5

Setup

WCS: #1

STOCK:

DX: 0.7in

DY: 0.25in

DZ: 1.15in

PART:

DX: 0.7in

DY: 0.25in

DZ: 1.15in

STOCK LOWER IN WCS #1:

X: 0in

Y: -0.25in


Z: 0in

STOCK UPPER IN WCS #1:

X: 0.7in

Y: 0in

Z: 1.15in

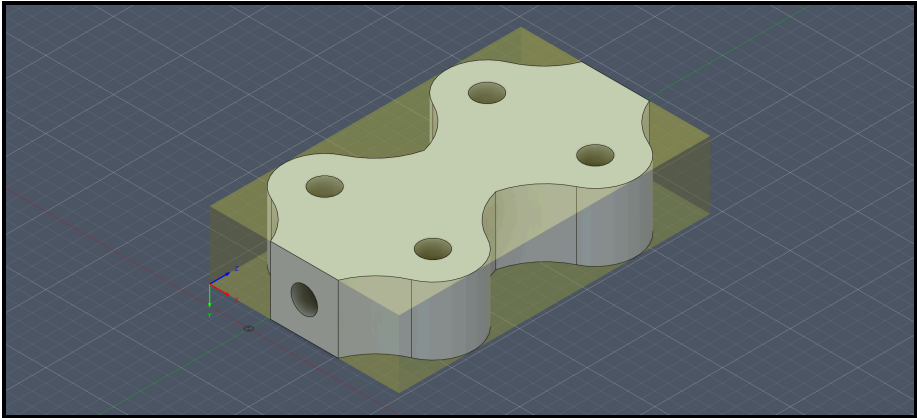

Total

NUMBER OF OPERATIONS: 1

NUMBER OF TOOLS: 1

TOOLS: T103

MAXIMUM Z: 1.75in

MINIMUM Z: 0.995in

MAXIMUM FEEDRATE: 9in/min

MAXIMUM SPINDLE SPEED: 7500rpm

CUTTING DISTANCE: 0.355in

RAPID DISTANCE: 1.155in

ESTIMATED CYCLE TIME: 17s

Tools

T103 D103 L103

TYPE: drill

DIAMETER: 0.098in

TIP ANGLE: 118°

LENGTH: 5.118in

FLUTES: 2

DESCRIPTION: M3 Tap Drill

MINIMUM Z: 0.995in

MAXIMUM FEEDRATE: 9in/min

MAXIMUM SPINDLE SPEED: 7500rpm

CUTTING DISTANCE: 0.355in

RAPID DISTANCE: 1.155in

ESTIMATED CYCLE TIME: 2s

Operations

Operation 1/1		T103 D103 L103	
DESCRIPTION: Drill3	MAXIMUM Z: 1.75in	TYPE: drill	
STRATEGY: Drilling	MINIMUM Z: 0.995in	DIAMETER: 0.098in	
WCS: #1	MAXIMUM SPINDLE SPEED: 7500rpm	TIP ANGLE: 118°	
TOLERANCE: 0in	MAXIMUM FEEDRATE: 9in/min	LENGTH: 5.118in	
STOCK TO LEAVE: 0in	CUTTING DISTANCE: 0.355in	FLUTES: 2	
	RAPID DISTANCE: 1.155in	DESCRIPTION: M3 Tap Drill	
	ESTIMATED CYCLE TIME: 2s		
	COOLANT: Flood		

Generated by [Fusion CAM 2702.1.47](#) 4/27/2026 9:06:16 AM