

Setup Sheet for Program 1001

JOB DESCRIPTION: Side Wall Drilling
DOCUMENT PATH: Chassis Side Wall v5

Setup

WCS: #1

STOCK:

DX: 1.75in

DY: 0.25in

DZ: 1.15in

PART:

DX: 1.75in

DY: 0.25in

DZ: 1.15in

STOCK LOWER IN WCS #1:

X: 0in

Y: -0.25in


Z: 0in

STOCK UPPER IN WCS #1:

X: 1.75in

Y: 0in

Z: 1.15in

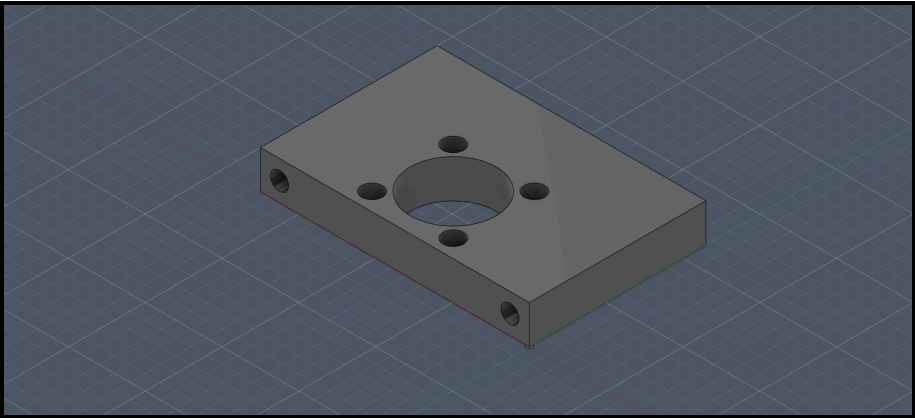

Total

NUMBER OF OPERATIONS: 1

NUMBER OF TOOLS: 1

TOOLS: T103

MAXIMUM Z: 1.75in

MINIMUM Z: 0.65in

MAXIMUM FEEDRATE: 9in/min

MAXIMUM SPINDLE SPEED: 7500rpm

CUTTING DISTANCE: 1.741in

RAPID DISTANCE: 8.266in

ESTIMATED CYCLE TIME: 27s

Tools

T103 D103 L103

TYPE: drill

DIAMETER: 0.098in

TIP ANGLE: 118°

LENGTH: 5.118in

FLUTES: 2

DESCRIPTION: M3 Tap Drill

MINIMUM Z: 0.65in

MAXIMUM FEEDRATE: 9in/min

MAXIMUM SPINDLE SPEED: 7500rpm

CUTTING DISTANCE: 1.741in

RAPID DISTANCE: 8.266in

ESTIMATED CYCLE TIME: 12s

Operations

file:///C:/Users/Owner/OneDrive - Washington State University (email.wsu.edu)/Creep Keepers Machining Setup Sheets Spring 2026/Chassis Side Wal... 1/2

Operation 1/1		T103 D103 L103	
DESCRIPTION: Drill1	MAXIMUM Z: 1.75in	TYPE: drill	
STRATEGY: Drilling	MINIMUM Z: 0.65in	DIAMETER: 0.098in	
WCS: #1	MAXIMUM SPINDLE SPEED: 7500rpm	TIP ANGLE: 118°	
TOLERANCE: 0in	MAXIMUM FEEDRATE: 9in/min	LENGTH: 5.118in	
STOCK TO LEAVE: 0in	CUTTING DISTANCE: 1.741in	FLUTES: 2	
	RAPID DISTANCE: 8.266in	DESCRIPTION: M3 Tap Drill	
	ESTIMATED CYCLE TIME: 12s		
	COOLANT: Flood		

Generated by [Fusion CAM 2702.1.47](#) 4/27/2026 9:04:40 AM